



working instruction Ventilation Smoke Tube (low corrosive)

Part No.Ventilation Smoke Tube: 450420 Part No.aspirator bulb: 450421

- Remove plastic tube and aspirator bulb from the box.
- Crush **both** glass ampoules inside the plastic tube as shown in fig.1.

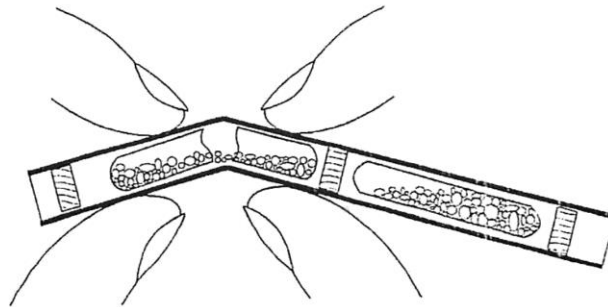


fig.1

- Connect tube and aspirator bulb as shown in fig.2. Note:
The ampoule containing white granulate has to be next to the bulb.

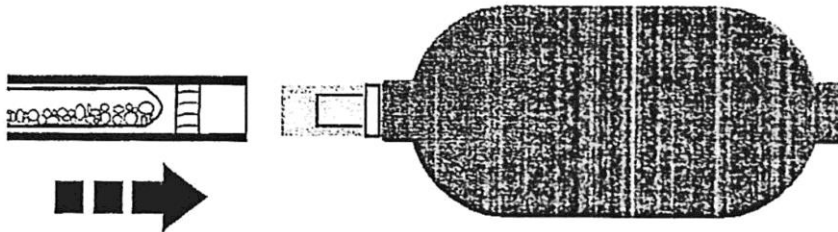


fig.2

- Squeezing the rubber aspirator bulb will push air through the plastic tube and create smoke.
- At temperatures $< 4^{\circ}\text{C}$ ($< 40^{\circ}\text{F}$) it is recommended to warm the tube (e.g. in hand) for a better smoke generating.
- Store **used** ventilation smoke tubes for a few hours under water and treat as normal waste.



Bedienungsanleitung Rauchröhrchen (korrosionsarm)

Sachnr. Rauchröhrchen: 450420

Sachnr. Rauch-Handpumpe: 450421

- Rauchröhrchen und Rauch- Handpumpe der Verpackung entnehmen.
- **Beide** Ampullen im Rauchröhrchen durch Knicken des Schlauches zerbrechen (Abb.1)

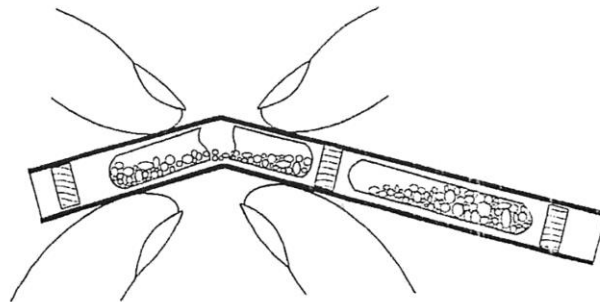


Abb.1

- Rauchröhrchen mit dem Schlauchstück der Hand- Rauchpumpe so verbinden, dass die Ampulle mit dem weißen Granulat zur Pumpe weist (Abb.2).

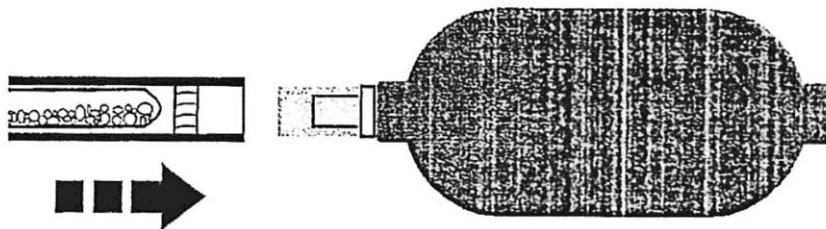


Abb.2

- Drücken des Gummiballs erzeugt Rauch.
- Bei Temperaturen $< 4^{\circ}\text{C}$ empfiehlt es sich, das Rauchröhrchen für eine bessere Rauchentwicklung leicht zu erwärmen (z.B. Handwärme).
- **Verbrauchte** Rauchröhrchen einige Stunden in ein Gefäß mit Wasser legen und dann in den Hausmüll geben.